Repairer Preventive Maintenance Checks and Services

6520-01-333-5961 Operating and Treatment Unit, Dental, Model FUS336

[M-Monthly, Q-Quarterly, S-Semiannually, and A-Annually]

| ITEM NO | INTERVAL | ITEM TO BE INSPECTED AND PROCEDURE | IS NOT MISSION CAPABLE IF: |
|------------|----------|--|--|
| 1 | S | Dental Unit | |
| | | a. Conduct an inventory to ensure that the items listed on the Equipment Parts and Accessories list are on hand. | Missing components or accessories prevent the operation of the dental unit. |
| | | b. Review the "General Service Information" as provided in the manufacturer's literature. | |
| | | c. Check the air and water filters as directed in the manufacturer's literature. | The air and water filters do not meet manufacturer's specifications. |
| | | d. Check the air and water regulator as directed in the manufacturer's literature. | Air pressure is not 60 to 80 psi, and the water pressure is not 40 psi +/-5 psi. |
| | | e. Verify the operation of the main control block as directed in the manufacturer's literature. | The unit has air or water leaks. |
| | | f. Verify the operation of the micro valves as directed in the manufacturer's literature. | The micro valves should turn handpieces on and off without air leaks. |
| | | g. Verify the operation of the foot control valve as directed in the manufacturer's literature. | The foot control valve does not meet manufacturer's specifications. |
| | | h. Verify the operation of the signal relay valve as directed in the manufacturer's literature. | The signal relay valve does not meet manufacturer's specifications. |
| | | i. Verify the operation of the chip blower valve as directed in the manufacturer's literature. | Air leaks past the valve when it is turned "OFF." Air leakage around the stem when the valve is "ON," and/or downstream pressure exhausts when the valve is turned "OFF." No air flows through the valve when it is turned "ON." |
| | | j. Verify the operation of the water pressure toggle valve as directed in the manufacturer's literature. | The water pressure toggle valve does not meet manufacturer's specifications. |
| | | k. Verify the operation of the needle valves as directed in the manufacturer's literature. | The needle valves do not meet manufacturer's specifications. |
| | | I. Verify the operation of the syringe as directed in the manufacturer's literature. | The syringe has water or air leaks. |
| | | m. Verify the operation of the air vacuum system as directed in the manufacturer's literature. | The system develops an air leak around the "HV" button or the tube becomes crimped or develops a leak. |
| | | n. Verify the operation of the air saliva ejector as directed in the manufacturer's literature. | The air saliva ejector does not meet manufacturer's specifications. |

Repairer Preventive Maintenance Checks and Services

6520-01-333-5961 Operating and Treatment Unit, Dental, Model FUS336

[M-Monthly, Q-Quarterly, S-Semiannually, and A-Annually]

| | | | 1 |
|------------|----------|---|---|
| ITEM NO | INTERVAL | ITEM TO BE INSPECTED AND PROCEDURE | IS NOT MISSION CAPABLE IF: |
| | | o. Verify the operation of the foot control valve. | There is an audible leakage while the foot control is not being used, there is inadequate airflow from the foot control, or the foot control is sluggish. |
| 2 | Ø | Storage Case Inspect the storage case for cracks, dents, or broken latches. | of the foot control is stuggish. |
| | | | |